

Header". Press the (*) key to enter. The display will read "Enter Line 1-4 or 0=All". Press the appropriate key for the line you wish to change. Note: if you wish to change more than one line of text, choose the (0) key for All, then scroll through the lines of text until you reach the ones you wish to change.

4. Press the (*) key to enter.
5. Look for the wash display message that reads "Print Key List". Press the corresponding white wash selection button. A key list will be printed on the receipt printer. Using this key list, enter in your new header message for the line you wish to change.
6. **NOTE:** After you enter a character, hit (#) to move to the next letter. If you wish to center your text, first plan out your message based on a 27-character line. Hit the (0) key, then the (#) key once for each blank space you need to put in to center your text. When you're finished entering the line of text, press the (*) key to enter. The receipt printer will print the new header message.